



Choose the correct Nozzle for your machine

Using the table choose your machines working pressure (bar or psi) and then the flow rate (LPM). This will give you the required cap size for your pressure washer application.

bar	80	90	100	110	120	130	140	150	160	175	200	225	250	CAP SIZE
psi	1160	1305	1450	1595	1470	1885	2030	2175	2320	2538	2900	3263	3625	
LPM	4.0	4.2	4.5	4.7	4.8	5.0	5.3	5.4	5.6	5.9	6.3	6.7	7.0	0.20mm
	5.0	5.3	5.6	5.9	6.1	6.4	6.6	6.9	7.1	7.5	8.0	8.5	9.0	0.25mm
	6.1	6.3	6.8	7.1	7.4	7.7	8.0	8.3	8.6	9.0	9.6	10.2	10.7	0.30mm
	7.0	7.4	7.8	8.2	8.6	8.9	9.2	9.5	9.8	10.3	11.0	11.7	12.3	0.35mm
	8.4	8.9	9.4	9.8	10.3	10.7	11.1	11.5	11.9	12.4	13.3	14.1	14.8	0.40mm
	9.0	9.6	10.2	10.5	10.9	11.4	11.8	12.2	12.6	13.2	14.1	15.0	15.8	0.45mm
	10.0	10.7	11.3	11.8	12.4	12.9	13.4	13.8	14.3	14.9	16.0	16.9	17.9	0.50mm
	11.1	11.8	12.4	13.0	13.6	14.1	14.7	15.2	15.7	16.4	17.5	18.6	19.6	0.55mm
	12.1	12.8	13.6	14.3	14.9	15.5	16.0	16.7	17.2	18.0	19.2	20.4	21.5	0.60mm
	13.2	14.0	14.7	15.4	16.1	16.8	17.4	18.0	18.6	19.4	20.8	22.0	23.2	0.65mm
	14.1	15.0	15.8	16.6	17.3	18.0	18.7	19.3	20.0	20.9	22.3	23.7	25.0	0.70mm
	15.2	16.1	16.9	17.7	18.5	19.3	20.0	20.7	21.4	22.4	23.9	25.3	26.7	0.75mm
	16.1	17.1	18.0	18.9	19.7	20.5	21.3	22.0	22.8	23.8	25.2	27.0	28.5	0.80mm
	17.1	18.1	19.1	20.0	20.9	21.8	22.6	23.4	24.1	25.3	27.0	28.6	30.2	0.85mm
	18.0	19.2	20.2	21.2	22.1	23.0	23.9	24.7	25.5	26.7	28.6	30.3	31.9	0.90mm
	20.1	21.4	22.5	23.6	24.6	25.6	26.6	27.6	28.5	29.8	31.8	33.7	35.6	1.00mm
	22.0	23.3	24.5	25.7	26.9	28.0	29.1	30.1	31.1	32.5	34.7	36.8	38.8	1.10mm
	24.0	25.4	26.8	28.1	29.4	30.6	31.7	32.8	33.9	35.4	37.9	40.2	42.4	1.20mm
26.0	27.5	29.0	30.4	31.8	33.1	34.4	35.6	36.7	38.4	41.1	43.6	45.9	1.30mm	
28.0	29.6	31.3	32.8	34.2	35.6	37.0	38.3	39.5	41.4	44.3	46.9	49.4	1.40mm	
30.2	32.1	33.8	35.3	36.9	38.4	39.9	41.3	42.6	44.6	47.7	50.6	53.3	1.50mm	